


Headlining (Remove and Install)

FRT No: 15201001

Note: This procedure does not remove headlining from vehicle, the headlining remains captive within the body.


Removal

1. Remove LH 'A' post trim (refer to procedure)
2. Remove RH 'A' post trim.
3. Release the LH upper 'B' post trim (refer to procedure).
4. Release the RH upper 'B' post trim.
5. Remove LH 'C' post trim (refer to procedure)
6. Remove RH 'C' post trim.
7. Remove driver sun visor (refer to procedure)
8. Remove passenger sun visor.
9. Remove rear view mirror (refer to procedure)
10. Carefully release clips (x4) securing headlining center trim to cross rail.
 - ⚠ Caution: Take care not to damage component(s).
 - ⚠ Caution: Replace any broken clips.
11. Release spigots (x3) and remove center headlining trim.

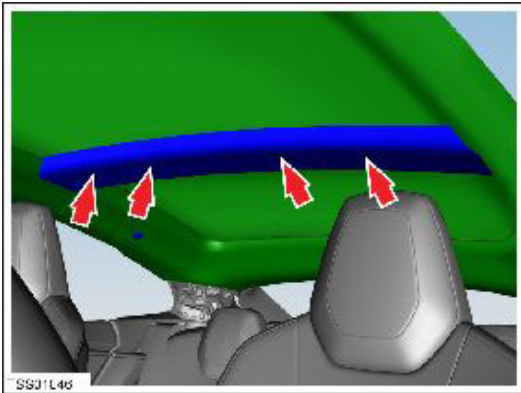

12. Carefully release clips (x9) securing headlining to front header.

Note: Components have been removed in this graphic to aid clarity.

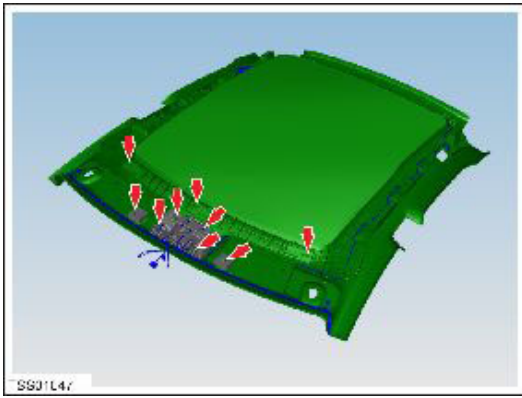

13. Disconnect harness connectors (x5) from overhead console.



14. Working front to back, release wiring harness from headlining and clips (x3).
15. Release rear header clips (x3) and remaining cantrail clips (x6).
16. Disconnect harness connectors from both rear map lights.
17. Release wiring harness from rear headlining clips (x2).
18. Position wiring harness aside for access.
19. Cover and support headlining.

Installation

Installation procedure is the reverse of removal.

Note: The windshield must be removed for access, if headlining is being replaced.

Trim - 'A' Post - LH (Remove and Install)


FRT No: 15184001

Removal


1. Remove the A-Pillar middle trim panels ([refer to procedure](#))
2. Release 'A' post trim retaining screw cover, lower edge first.
3. Remove screw (x1) securing trim to 'A' post (torque 2 Nm).



4. Carefully release clip (x1) securing trim to 'A' Post
5. Clear location peg and lift to release lower locating lugs.

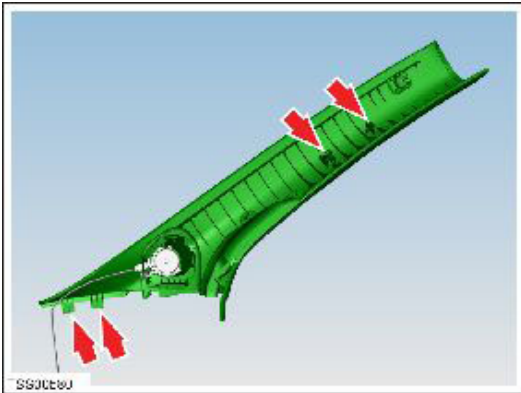

6. Release trim from body.
7. Disconnect tweeter harness connector and remove 'A' post trim.

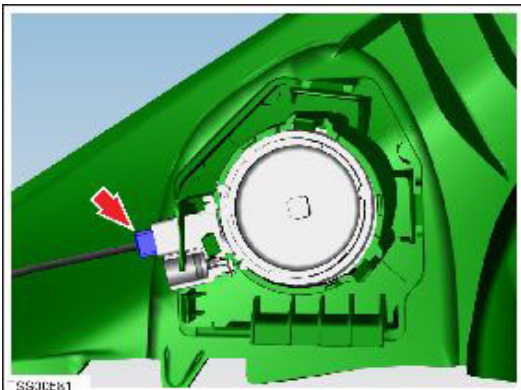

Installation

1. Installation procedure is the reverse of removal, except for the following:
2. Ensure both lower lugs are located and upper peg aligns to body before driving clip fully home.

Trim - 'B' Post - Upper - LH (Remove and Install)


FRT No: 15184201

Removal

1. Remove the LH lower 'B' post trim ([refer to procedure](#)).
2. Carefully release the clips (x4) that secure the 'B' post upper trim to the body by gently pulling the lower edge away from the body and releasing the top alignment dowel.

Caution: Take care not to damage component(s).

3. Allow the 'B' post upper trim to rest on the seat belt buckle.

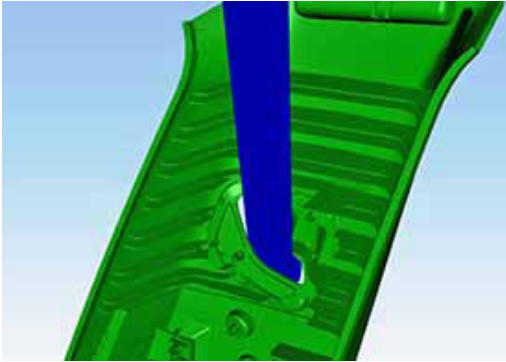

Installation


Installation procedure is the reverse of removal.


Trim - 'C' Post Upper - LH (Remove and Replace)

FRT No: 15184602


Removal

1. Open LH rear door.
2. Fold rear seat back forward for access.
3. Using a suitable tool carefully release clips (x4) securing 'C' post trim to body.

 **Caution:** Take care not to damage component(s).

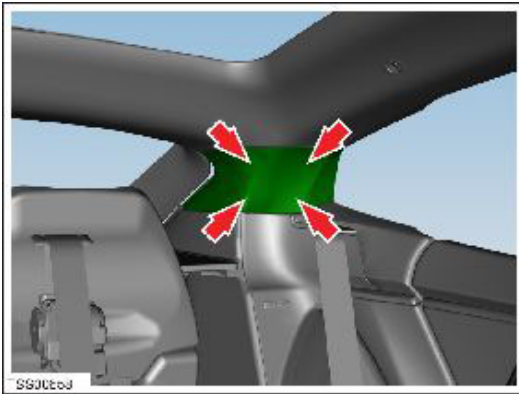

4. Carefully release trim from interlocking lugs (x3).
5. Remove 'C' post trim.

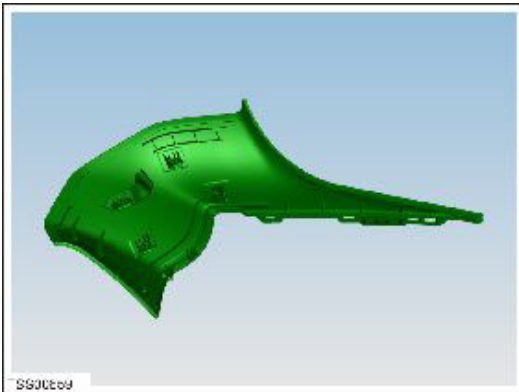

Installation


Installation procedure is the reverse of removal.


Sun Visor - Driver's (Remove and Replace)

FRT No: 15050602

Removal

1. Use a trim stick or other non-marring pry tool to release the visor mounting cover.

 *Caution: Take care not to damage component(s).*

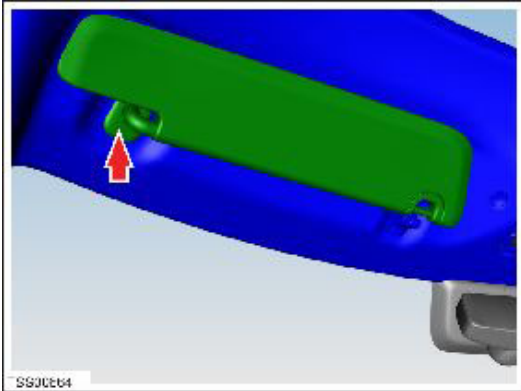

2. Remove the screw that secures the sun visor to the roof.
3. Remove the sun visor.

Installation

Installation procedure is the reverse of removal.


Rear View Mirror - 1st Generation (Remove and Replace)

FRT No: 15050202


Note: This procedure describes how to remove and replace the 1st generation rear view mirror. If the vehicle is equipped with a 2nd generation rear view mirror, refer to procedure 15050502 ([refer to procedure](#)).


Removal

1. Cover the dash assembly to avoid damage.


 **Caution:** Make sure the touch screen is fully protected.

2. Release the clips (x5) that secure the RH and LH mirror finishers.


 **Caution:** Take care not to damage component(s).

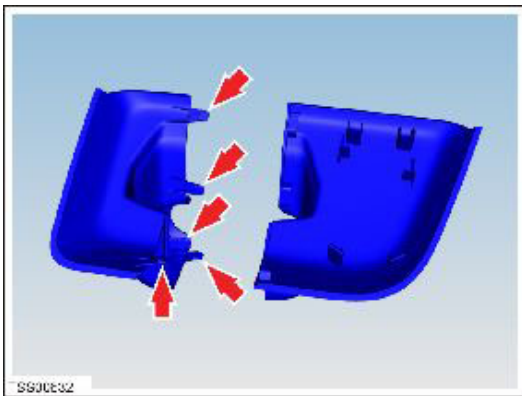

3. Remove the LH and RH mirror finishers.
4. Carefully turn the mirror assembly counter-clockwise and release it from the glazing mount.
5. Release the clip and disconnect the mirror electrical harness connection.

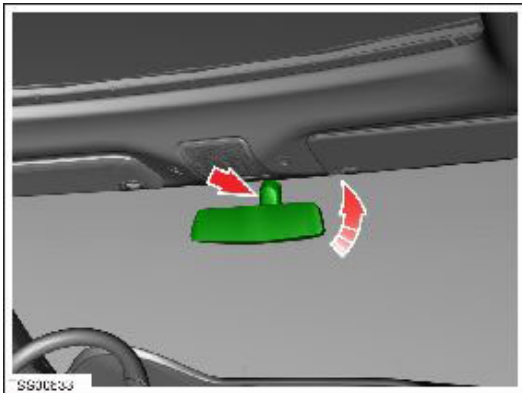

6. Remove the mirror.

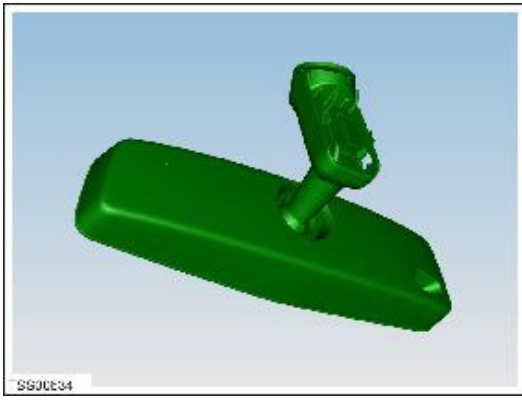

Installation

Installation procedure is the reverse of removal.