



## No serviceable relays in Cabin Fusebox

Des	Value	Type	Functional Description	Option
F200	5A	MICRO2	Memory Seat Module	ALL
F201	25A	MICRO2	Window Lift Motor, Left Rear	ALL
F202	15A	MICRO2	12V Accessory	ALL
F203	-	-	not used	ALL
F204	25A	MICRO2	Window Lift Motor, Right Front	ALL
F205	25A	MICRO2	Window Lift Motor, Left Front	ALL
F206	25A	MICRO2	Sunroof	RFPO
F207	15A	MICRO2	12V Accessory Outlet	ALL
F208	-	-	not used	ALL
F209	-	-	not used	ALL
F210	30A	MICRO2	Power Liftgate	TPD1
F211	25A	MICRO2	Window Lift Motor, Right Rear	ALL
F212	20A	MICRO2	Electric Park Brake (primary)	ALL
F213	20A	MICRO2	Electric Park Brake (redundant)	ALL
F214	-	-	not used	ALL
F215	10A	MICRO2	Steering Wheel Heater	CW02
F216	-	-	not used	ALL
F217	20A	MICRO2	Premium Audio Amplifier	AU01
F218	20A	MICRO2	Base Audio Amplifier	ALL
F219	5A	MICRO2	Glove Box Light, Diagnostics	ALL
F220	5A	MICRO2	Brake Pedal Switch	ALL
F221	5A	MICRO2	Battery Management System	ALL
F230	15Ax2	MICRO3	Seat Heater, Second Row, Right	ALL
F231	15Ax2	MICRO3	Seat Heater, Second Row, Left	ALL
F232	15Ax2	MICRO3	Seat Heater, Second Row, Middle	ALL
F233	10Ax2	MICRO3	Seat Heater, First Row, Left	ALL
F234	5Ax2	MICRO3	Seat Heater, First Row, Right	ALL
F235	10Ax2	MICRO3	Door Controls, Left, Door Handle Left Front	ALL
F236	5Ax2	MICRO3	Door Controls, Right, Door Handle, Right Front	ALL
F237	5Ax2	MICRO3	Door Handle, Left Rear	ALL
F238	5Ax2	MICRO3	Door Handle, Right Rear	ALL
F239	5Ax2	MICRO3	Gateway / Center Display	ALL
F240	30A	J-Case-S	Charging Systems	ALL
F241	30A	J-Case-S	Steering Angle / Column	ALL
F242	30A	J-Case-S	Radio, Vanity Lights, Rear View Mirror	ALL
F243	30A	J-Case-S	Instrument Cluster	ALL
F244	30A	J-Case-S	iBooster	ALL
F245	30A	J-Case-S	Seat Motors, Right Front	ALL
F246	30A	J-Case-S	Seat Motors, Left Front	ALL

Note: Fuses may be installed even when function does not apply to your vehicle

