


Number	Ampere rating [A]	Protected circuit
F200	5	Memory Seat Module
F201	25	Window Lift Motor, Left Rear
F202	15	12V Accessory
F203	—	—
F204	25	Window Lift Motor, Right Front
F205	25	Window Lift Motor, Left Front
F206	25	Sunroof
F207	15	12V Accessory Outlet - Center Console
F208	—	—
F209	—	—
F210	30	Power Liftgate
F211	25	Window Lift Motor, Right Rear
F212	30	Electric Park Brake (primary)
F213	20	Electric Park Brake (redundant)
F214	—	—
F215	10	Steering Wheel Heater
F216	—	—
F217	20	Premium Audio Amplifier
F218	20	Base Audio Amplifier
F2019	5	Glove Box Light, Diagnostics
F220	5	Brake Pedal Switch
F221	5	Battery Management System
F230	15	Seat Heater, Second Row, Right
	15	—
F231	15	Seat Heater, Second Row, Left
	15	Seat Heater, Second Row, Middle
F232	15	Seat Heater, First Row, Left
	15	Seat Heater, First Row, Right
F233	10	Door Controls, Left, Door Handle Left Front
	10	Door Controls, Right, Door Handle, Right Front
F234	5	Door Handle, Left Rear
	5	Door Handle, Right Rear
F235	10	Gateway / Center Display
	10	Charging Systems
F236	5	Steering Angle / Column
	5	Radio, Vanity Lights, Rear View Mirror
F237	5	Instrument Cluster
	5	iBooster
F240	30	Seat Motors, Right Front
F241	30	Seat Motors, Left Front

TESLA KICK PLATE FUSE DIAGRAM

<https://www.autogenius.info/tesla-model-s-2015-fuse-box-diagram/>

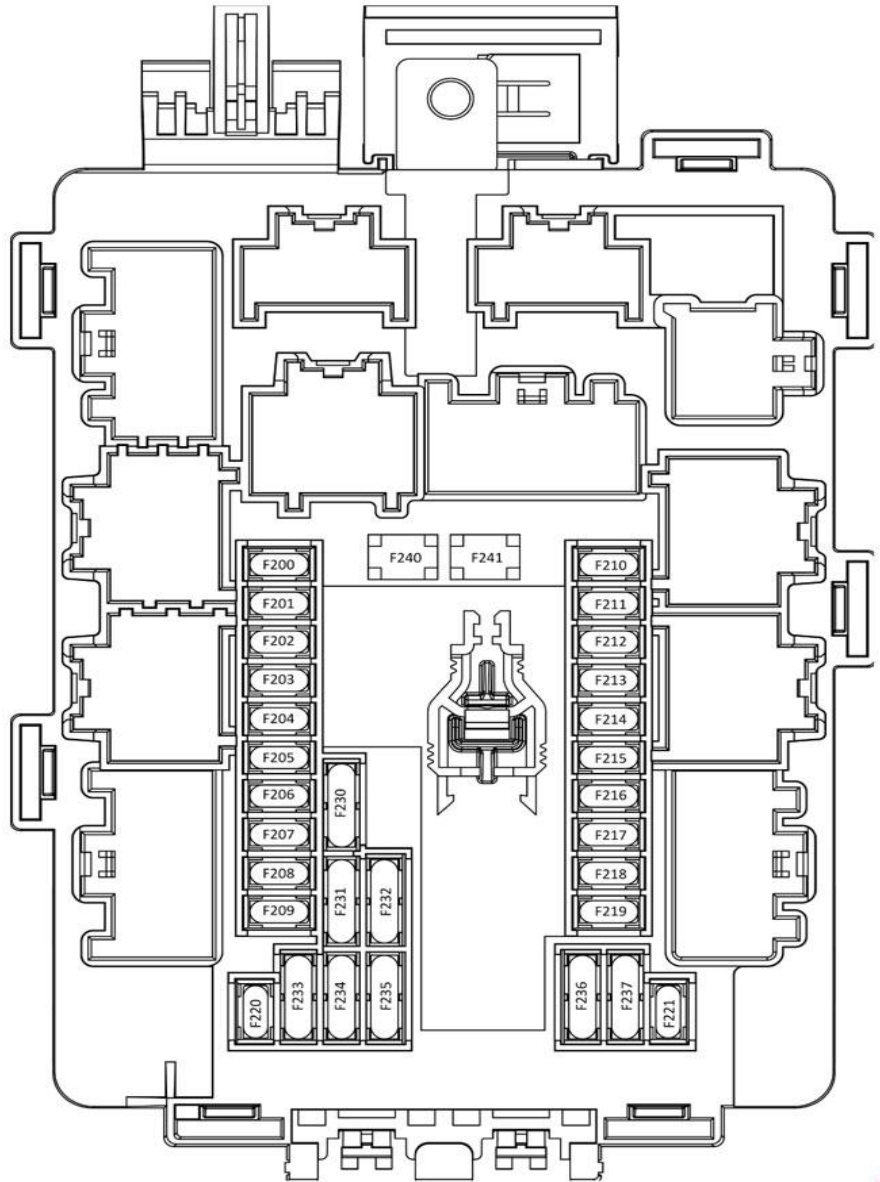

Number	Ampere rating [A]	Protected circuit
F1	250	DCDC input
F2	60	Power Steering
F3	—	—
F4	125	Cabin Subfeed
F100	5	Siren and Intrusion Module
F101	15	Driver Assist Forward Camera
F102	—	—
F103	25	ABS Valves
F104	5	Battery Sensor
F105	—	—
F106	—	—
F107	5	Drive Inverter, Rear
F108	5	Drive Rail Sense
F109	10	Park Assist
F110	5	Restraints Control Module
F111	—	—
F112	5	Cabin Comfort Systems
F113	10	Cabin Air Heater
F114	10	Thermal Controller, Inlets, Battery Heater
F115	—	—
F116	10	Body Controls Group 1
F117	10	Air Suspension Controls/Valves
F118	—	—
F120	—	—
F121	—	—
F122	15	Coolant Pump 3
F123	15	Coolant Pump 2
F124	10	Windshield Wiper De-Ice
F125	10	Contact Power
F126	—	—
F127	—	—
F130	15	Driver Assist Forward Radar
F131	—	—
F132	5	Drive Inverter, Front
F133	—	—
F134	—	—
F135	10	Driver Assistance Forward Camera Defog
F136	15	Coolant Pump 4
F137	15	Coolant Pump 1
F138	30	Rear Defrost Grid
F139	—	—
F140	—	—
F141	—	—
F142	15	Security Controls and Horns
F143	30	Body Controls Group 2
F144	20	Headlamps
F145	25	Exterior Lighting
F150	40	Condenser Fan, Left
F151	50	ABS Pump Motor
F152	—	—
F153	—	—
F154	40	Air Suspension Compressor
F155	40	Condenser Fan, Right
F156	40	iBoost (Brake Assist)
F160	30	Cabin Blower
F161	—	—
Relay		
K100	—	
K101	HVAC Rail group 1	
K102	Rear Defrost Grid	
K110	Drive Rail	
K111	HVAC Rail	
K112	Air Suspension Controller	

TESLA FRUNK FUSE DIAGRAM

