

Last modified: 03/03/2020 13:18:43

Trim - Liftgate Trough - Lower (Remove and Replace)


Correction Code 12271002

Removal

1. Open the liftgate.
2. Carefully release the lower portion of the liftgate seal.
3. Use a trim tool to release the lower liftgate trough trim.

Note

Components have been removed in this graphic to aid clarity.

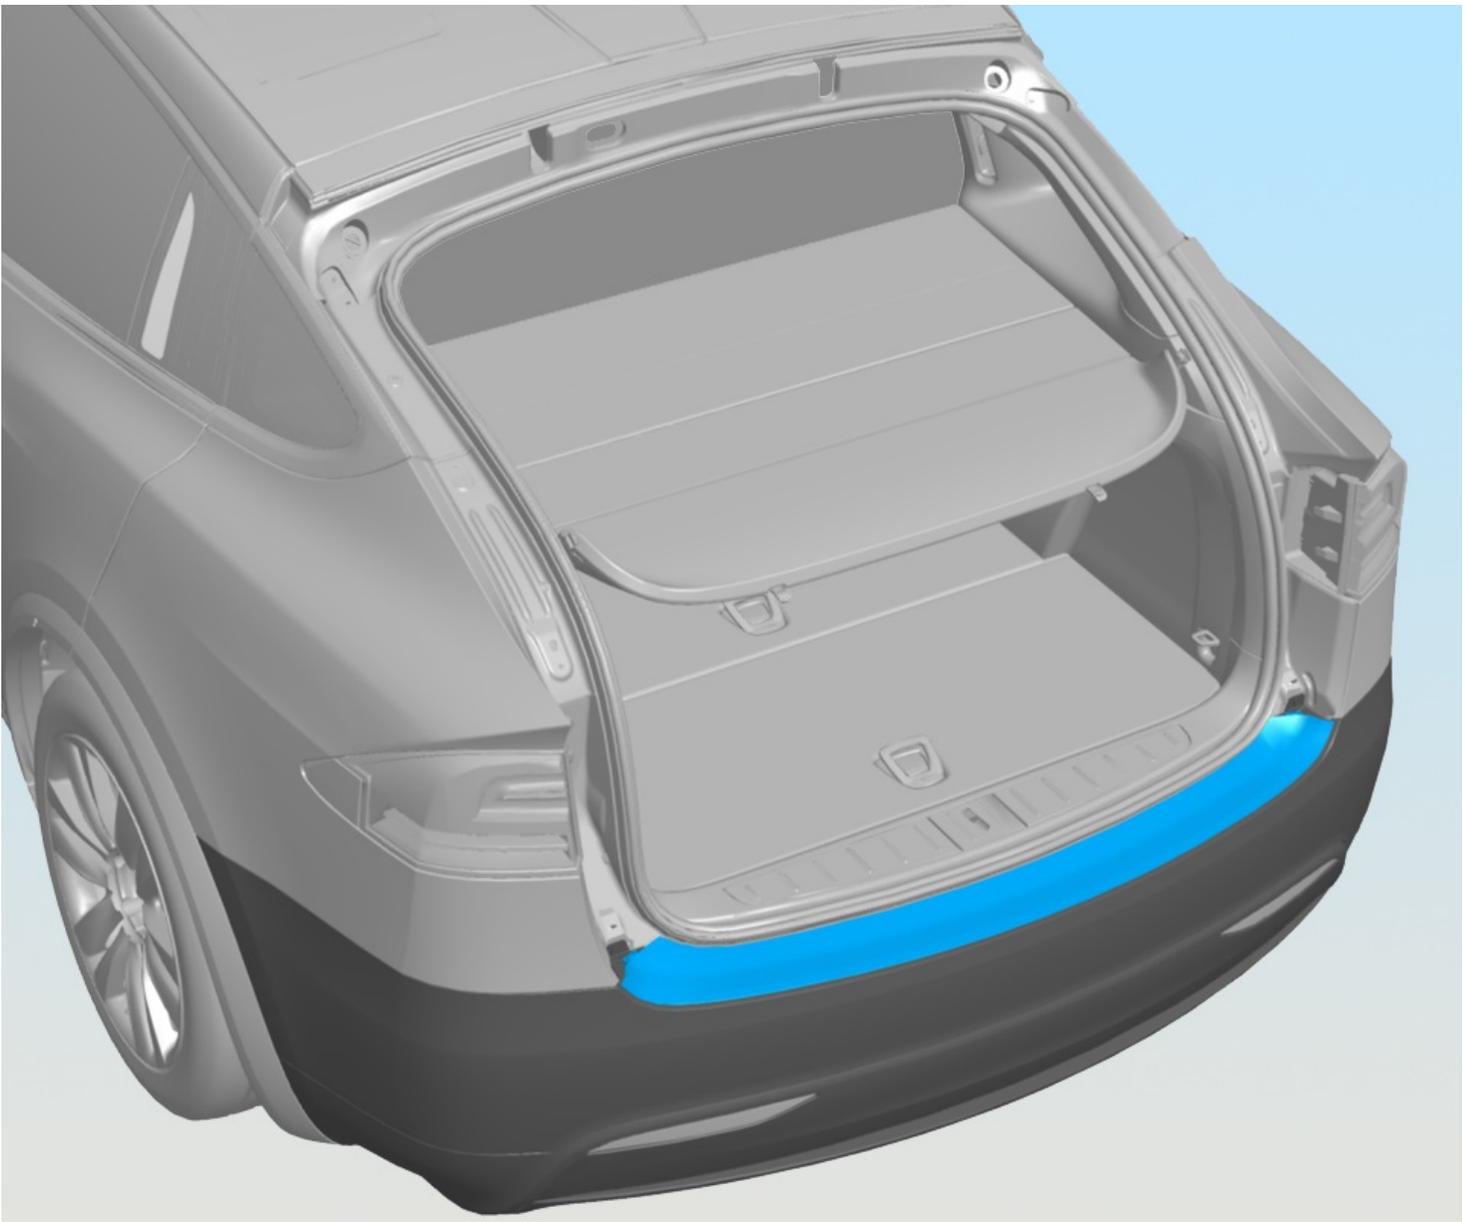

4. Remove the lower liftgate trough trim from the vehicle.

i Note

The liftgate trough trim cannot be reused. Discard the liftgate trough trim.

Installation

Installation procedure is the reverse of removal, except for the following:

i Note

Clean the affected areas before installation.

1. Ensure that the liftgate trough trim is fully seated.