

Trim - B-Pillar - Lower - LH (Remove and Install)

Correction Code 15184401

Removal


1. Power the seat forward to gain access to the 'B' post.
2. Carefully release the leading edge of the rear rocker panel trim for access.




CAUTION

Take care not to damage component(s).


3. Carefully release the trailing edge of the front rocker panel trim for access.
4. Remove the screws (x2) that secure the lower 'B' post lower trim to the body (torque 2 Nm).
5. Carefully release the clips (x4) that secure the 'B' post lower trim to the body.

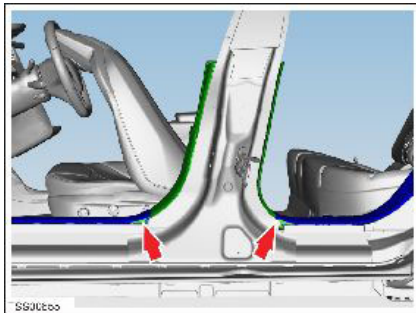

6. Lift the trim to clear the seat and pre-tensioner.

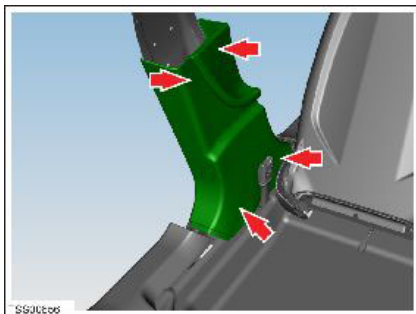

7. Remove the 'B' post lower trim.

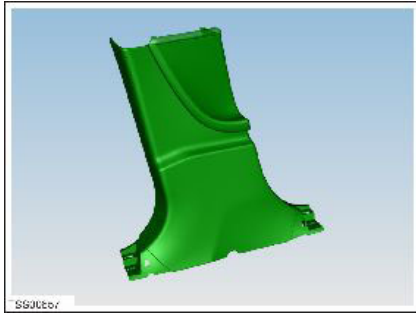

Installation

1. Installation procedure is the reverse of removal, except for the following:



CAUTION

Replace any broken clips.