

Trim - B-Pillar - Upper - LH (Remove and Install)

Correction Code 15184201


Removal

1. Remove the LH lower B-pillar trim ([refer to procedure](#)).
2. Carefully release the clips that secure the B-pillar upper trim to the body. Gently pull the lower edge away from the body and release the locator posts from the headliner.




CAUTION

Take care not to damage component(s).

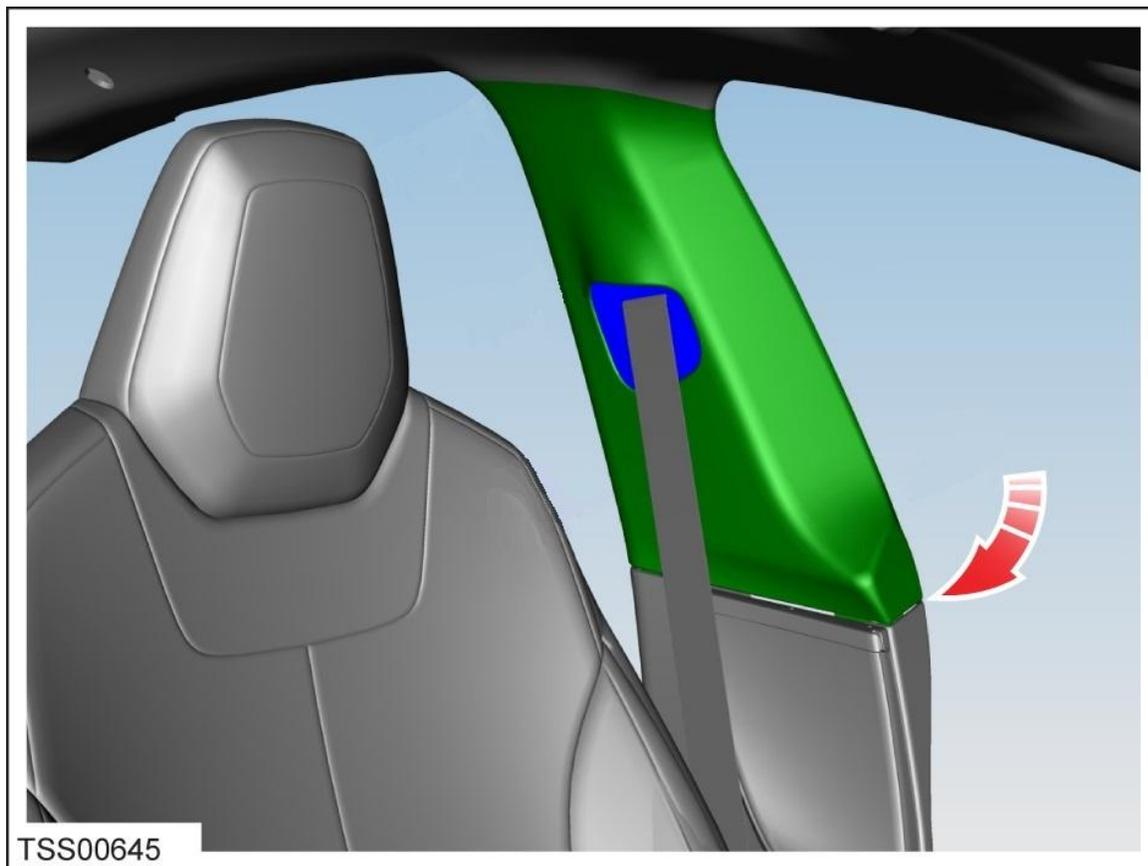

3. Allow the B-pillar upper trim to rest on the seatbelt buckle.

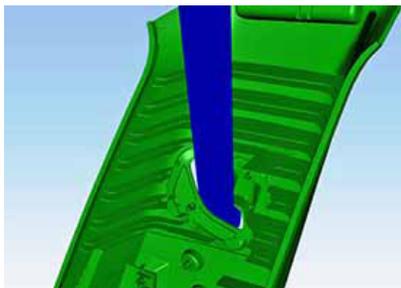

Installation

Installation procedure is the reverse of removal, except for the following:

CAUTION
Replace all patchbolt(s).

Inspect the B-pillar upper trim for damage to the alignment posts at the top that might prevent the correct reinstall of the upper trim.

Note
Excessively damaged upper trim can unexpectedly release while the vehicle is being operated.

If the alignment posts are excessively damaged, discontinue this procedure and replace the B-pillar upper trim (refer to procedure).