

# **Installation Guide**

## **Ghost5**





**Before starting the installation don't forget to turn off your car**

➤ To turn off your car, sit in the passenger seat with the door open

➤ Turn off your car, select SAFETY & SECURITY from the menu and press POWER OFF.

➤ When you turn off your car, make sure no one is sitting in the driver's seat and that no more door will be opened so that the car will not start again.

➤ You can start the installation with the steps below.



Watch the installation video to help you out :

**The Boost LFP module and the Bypass should be installed on the harness at the very end so that you can get through the harness installation with more ease.**



Connectors for the driver side



Connectors for the passenger side

**1**

**Lift your Tesla and remove your wheels nuts (both rear wheels)**



**2**

**With a flat head screwdriver or plastic fastener remover, remove the 3 plastic clips from both side of the car**





**3**

**Unscrew your rear bumper on the driver side with a Torx T25 socket**



**4**

**Pull up both inner fenders to access the drive inverter connector**






**5**

**Pull the red tab to unlock the connector and press the same tab to disconnect the connector**



**6**

**Connect the Ingenext harness between the Tesla connectors and lock the red tab**

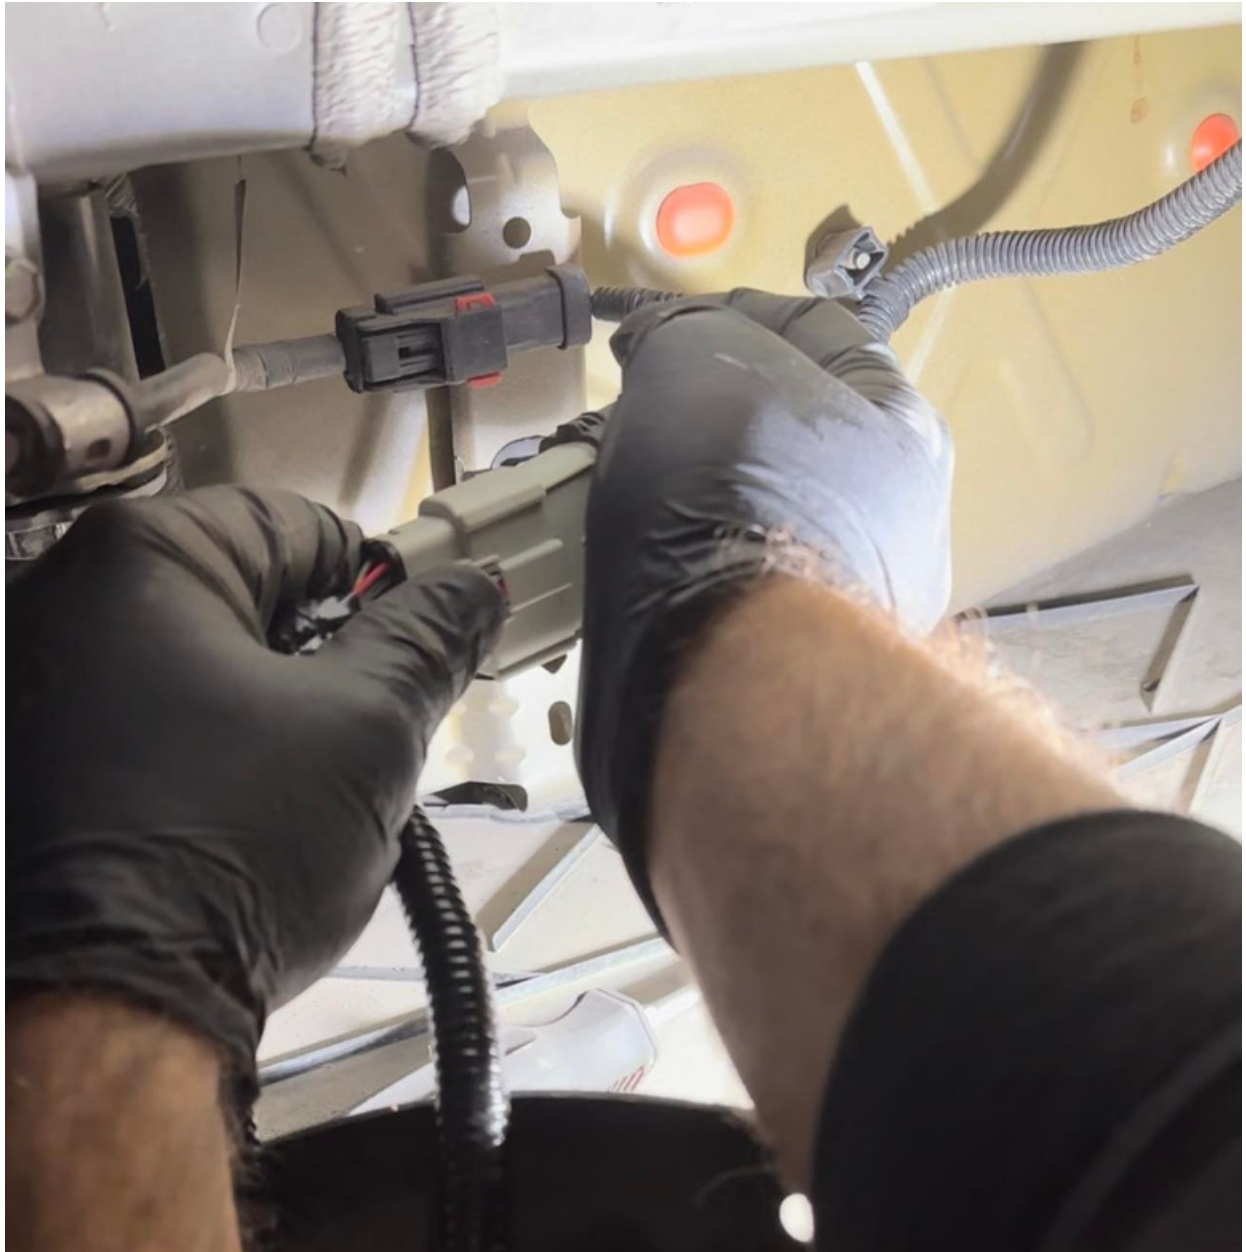

**7**

**Take the other end of the Ingenext harness and push it as far as you can on the passenger side**





7

**Push push baby**



**8**

**Go on the other side of your Tesla and grab the connector you just pushed**





## 8 Yes, you got it!




9

**Pull the red tab to unlock the connector and press the same tab to disconnect the connector**



- 10** Connect the Ingenext harness between the Tesla connectors and lock the red tab

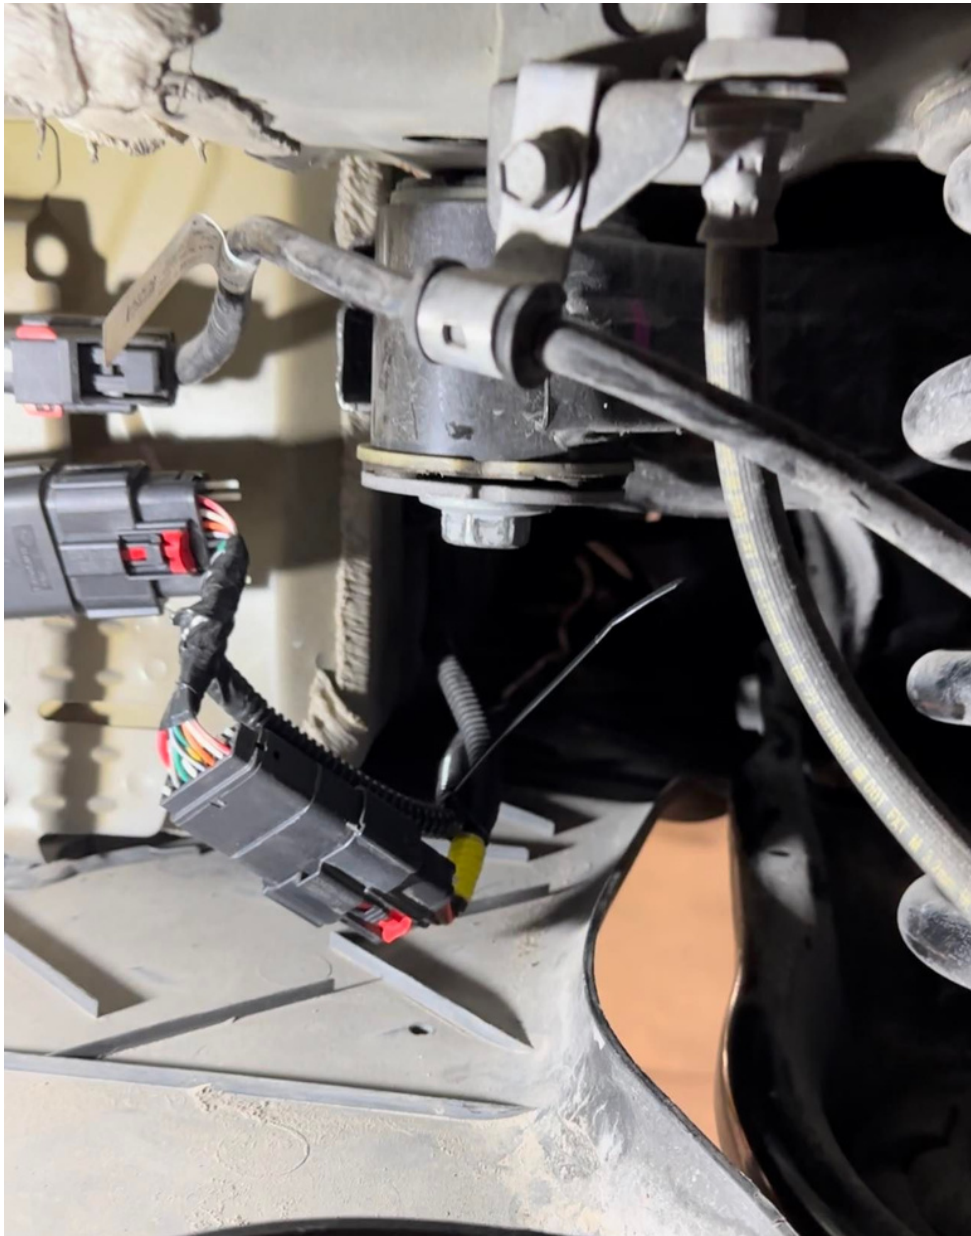



**11**

**Reinstall the connector into the original plastic clips**



**12**

**attach securely the harness  
to the motor harness using  
the zip ties provided**





**13**

**Go on the driver side, take the harness, pull the bumper cover and push it through the vent**



**13**

**Here's what you need to do with the vent**



**14**

**Open the trunk and remove the rear plastic sill**





**15**

**With a flat head screwdriver remove the plastic clip on the left of the trunk**



**16**

**Pull the carpet to get access to the vent and the harness you just pushed.**






**17**

**Pull the harness inside of the trunk**




**18**

Then you can plug the  
**BOOST LFP** module and the  
**Nice Try** module

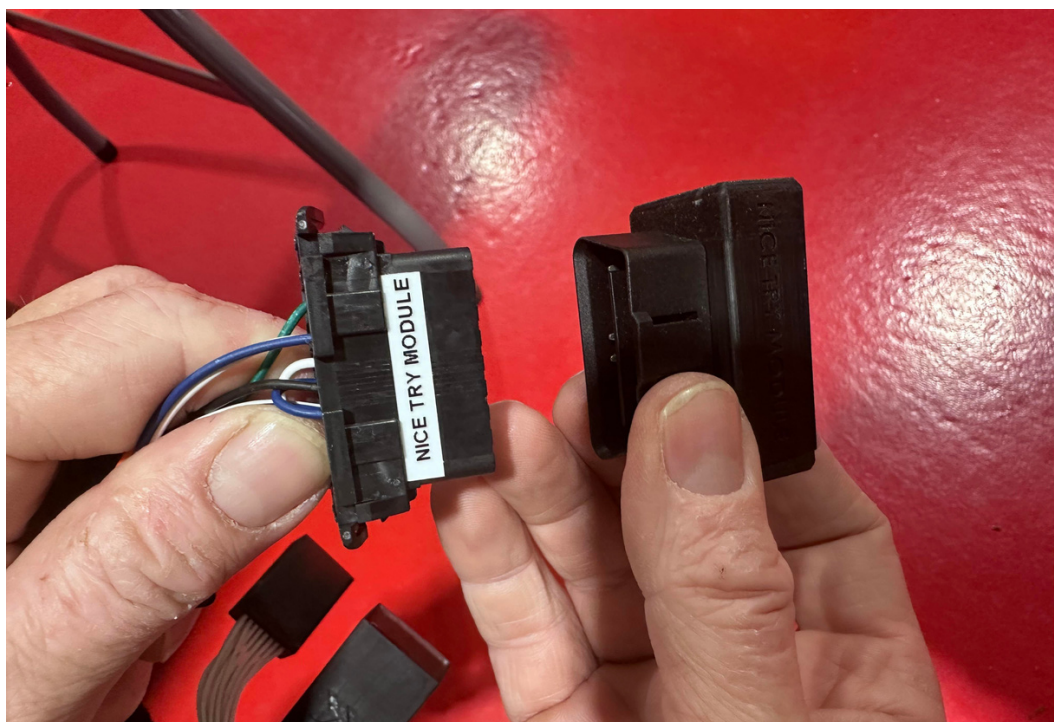



**19** Then you can install the velcro sticker on the body under the tail light and hook them

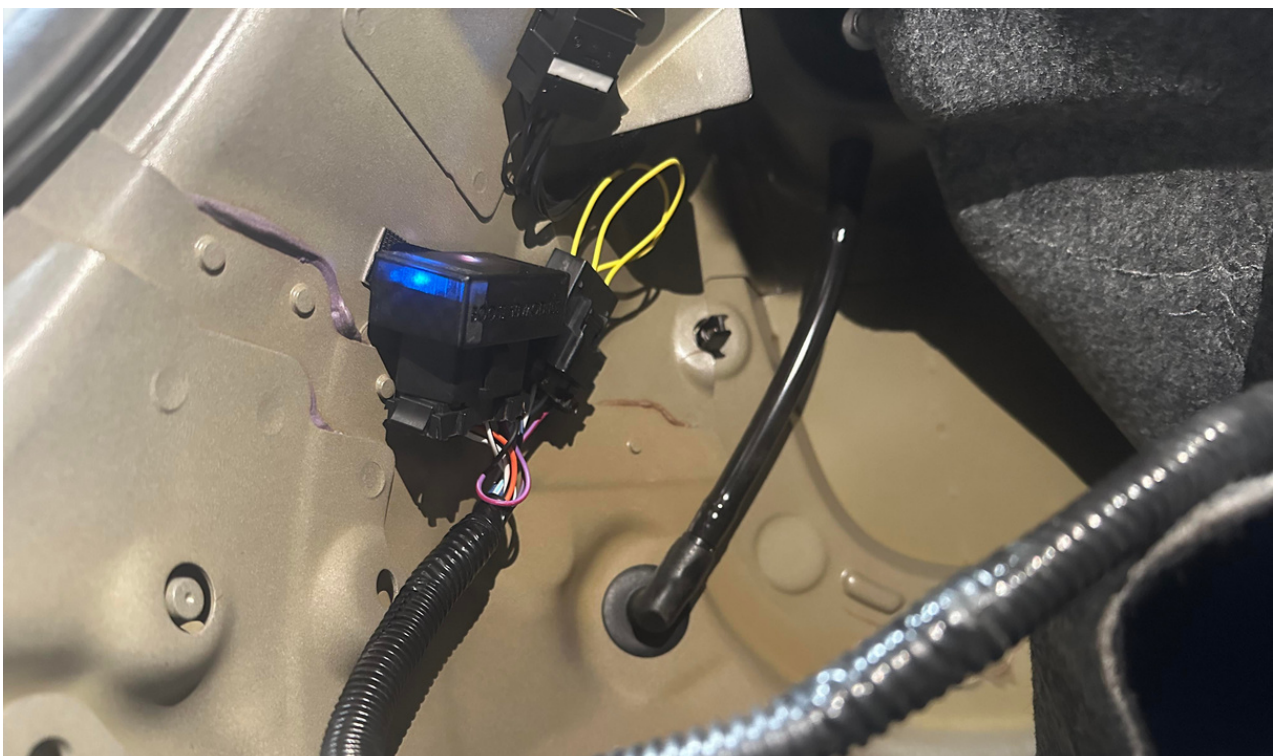

**20**

**Repeat the steps to reinstall everything**

**That's it, you're done!  
Now enjoy the increased  
power :)**